



# HMMS32

## PART NUMBER DESCRIPTION

HMS-2MM	2MM HEX DRIVER - 1/4" SQ. DR.
HMS-2.5MM	2.5MM HEX DRIVER - 1/4" SQ. DR.
HMS-3MM	3MM HEX DRIVER - 1/4" SQ. DR.
HMS-4MM	4MM HEX DRIVER - 1/4" SQ. DR.
HMS-5MM	5MM HEX DRIVER - 1/4" SQ. DR.
HMS-5.5MM	5.5MM HEX DRIVER - 1/4" SQ. DR.
HMS-6MM	6MM HEX DRIVER - 3/8" SQ. DR.
HMS-7MM	7MM HEX DRIVER - 3/8" SQ. DR.
HMS-8MM	8MM HEX DRIVER - 3/8" SQ. DR.
HMS-9MM	9MM HEX DRIVER - 3/8" SQ. DR.
HMS-10MM	10MM HEX DRIVER - 1/2" SQ. DR.
HMS-11MM	11MM HEX DRIVER - 1/2" SQ. DR.
HMS-12MM	12MM HEX DRIVER - 1/2" SQ. DR.
HMS-13MM	13MM HEX DRIVER - 1/2" SQ. DR.
HMS-14MM	14MM HEX DRIVER - 1/2" SQ. DR.
HMS-15MM	15MM HEX DRIVER - 1/2" SQ. DR.
HMS-16MM	16MM HEX DRIVER - 1/2" SQ. DR.
HMS-17MM	17MM HEX DRIVER - 1/2" SQ. DR.
HMS-18MM	18MM HEX DRIVER - 1/2" SQ. DR.
HMS-19MM	19MM HEX DRIVER - 1/2" SQ. DR.
HMS-20MM	20MM HEX DRIVER - 1/2" SQ. DR.
HMS-21MM	21MM HEX DRIVER - 1/2" SQ. DR.
HMS-22MM	22MM HEX DRIVER - 1/2" SQ. DR.
HXLM103	3MM HEX DRIVER - 6" OAL - 3/8" SQ. DR.
HXLM104	4MM HEX DRIVER - 6" OAL - 3/8" SQ. DR.
HXLM105	5MM HEX DRIVER - 6" OAL - 3/8" SQ. DR.
HXLM155	5.5MM HEX DRIVER - 6" OAL - 3/8" SQ. DR.
HXLM106	6MM HEX DRIVER - 6" OAL - 3/8" SQ. DR.
HXLM107	7MM HEX DRIVER - 6" OAL - 3/8" SQ. DR.
HXLM108	8MM HEX DRIVER - 6" OAL - 3/8" SQ. DR.
HXLM109	9MM HEX DRIVER - 6" OAL - 3/8" SQ. DR.
HXLM110	10MM HEX DRIVER - 6" OAL - 3/8" SQ. DR.

## VIM Tools

Tampa, FL 33610 USA

1(800) 249-9444 Fax 813-231-6305

[www.VIMTools.com](http://www.VIMTools.com) Email [Sales@vimtools.com](mailto:Sales@vimtools.com)



@VIMTools